

User Manual

Thank you for purchasing our pocket scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service.

Never load the scale with more than the maximal capacity. Overloading can permanently damage it! Avoiding any exposure to extreme heat or cold, your scale works better when operated at normal room temperature. Always allow the scale to acclimate to normal room temperature for at least 1 hour before use. Give your scale sufficient warm up time. Usually 30 seconds to give the internal components a chance to stabilize before calibration. Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents and a close distance to other electronic equipment can all cause an adverse effect on the reliability and accuracy of your scale. Handle with care. Gently apply all items to be weighed onto tray top. Although this scale is designed to be quite durable, try to avoid rough treatment as this may permanently damage the internal sensor. Avoid shaking, dropping or otherwise shocking the scale. This is a precision instrument and must be handled with extreme care. Only operate the scale on a stable, vibration free surface.

I. OPERATION:

1. Place scale on a horizontal flat surface, press [ON] key to turn on the scale.
2. Wait until "0.00" is displayed.

3. Put the object(s) on the weighing platform.
4. Using the [MODE] key, you can switch between the weighing units.

II. TARE WEIGHING:

1. Turn on scale as described above.
2. Place the "tare item" on the platform.
3. Press [TARE] and wait until "0.00" is displayed.
4. Add the "net-weight-item".

III. CALIBRATION:

1. Turn on the scale by pressing [ON] key.
2. Wait until the LCD displays "0.00" and then press and HOLD [MODE] key for 3 seconds, the LCD will display "CAL", and then release the [MODE] key.
3. press [MODE] key again, the LCD will display a weight number, Add the same weight on the middle of platform until LCD display "PASS" and return to normal weighing mode.
4. Put away the calibration weight and press [OFF] to turn off the scale and the calibration is finished!
You can turn on the scale and use it normally now.
PS: high accuracy scale need calibrate with 2 different weights. Please put weights follow the LCD display number.

IV. SPECIFICATION:

Calibration: Auto calibration

Tare range: Tare full capacity

Operation temp: 50-86 degrees Fahrenheit

Power: 2 x AAA Batteries

Dimensions: 114 x 77 x 18mm

Platform Size: 73 x 65mm

Weight: 110g